


RS232

SYMBOLS AS SHOWN ON SUBMITTAL AND CONSTRUCTION DOCUMENTS

RS-232 INTERFACE PART # CI-RS232

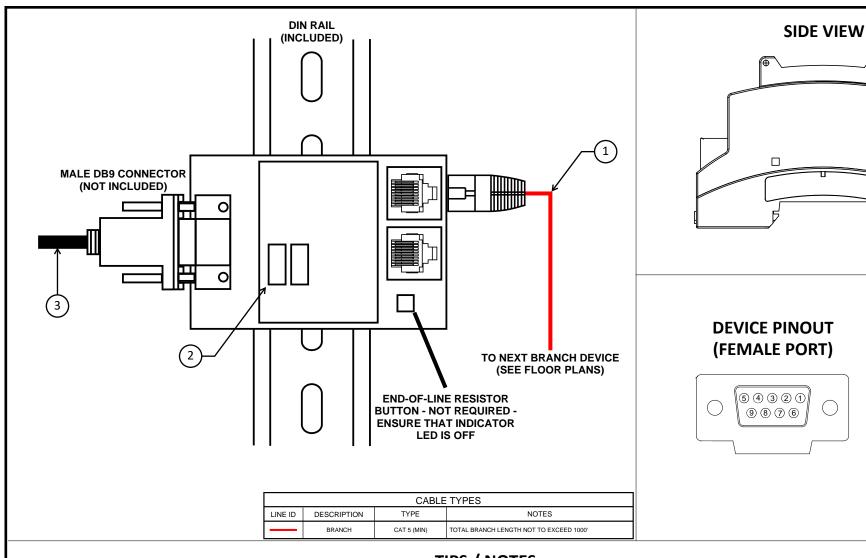

PIN	WIRE
1	NC
2	RxD
3	TxD
4	NC
5	GND
6	NC
7	RTS
8	CTS
9	NC

TIPS / NOTES

- 1) ENSURE CABLES ARE PLUGGED INTO BRANCH PORTS OF ROOM MANAGERS DO NOT CONNECT TO SMARTNET OR SMARTPACKS
- 2) ADDRESS DISPLAY IF DEVICE HAS COMMUNICATION "AC" WILL BE SHOWN
- 3) SERIAL CABLE TO 3RD PARTY DEVICE MAX 30'

Touché Lighting Controls (a Product of ESI Ventures)