


SMART DIGITAL OUTPUT OCCUPANCY REPEATER WIRING

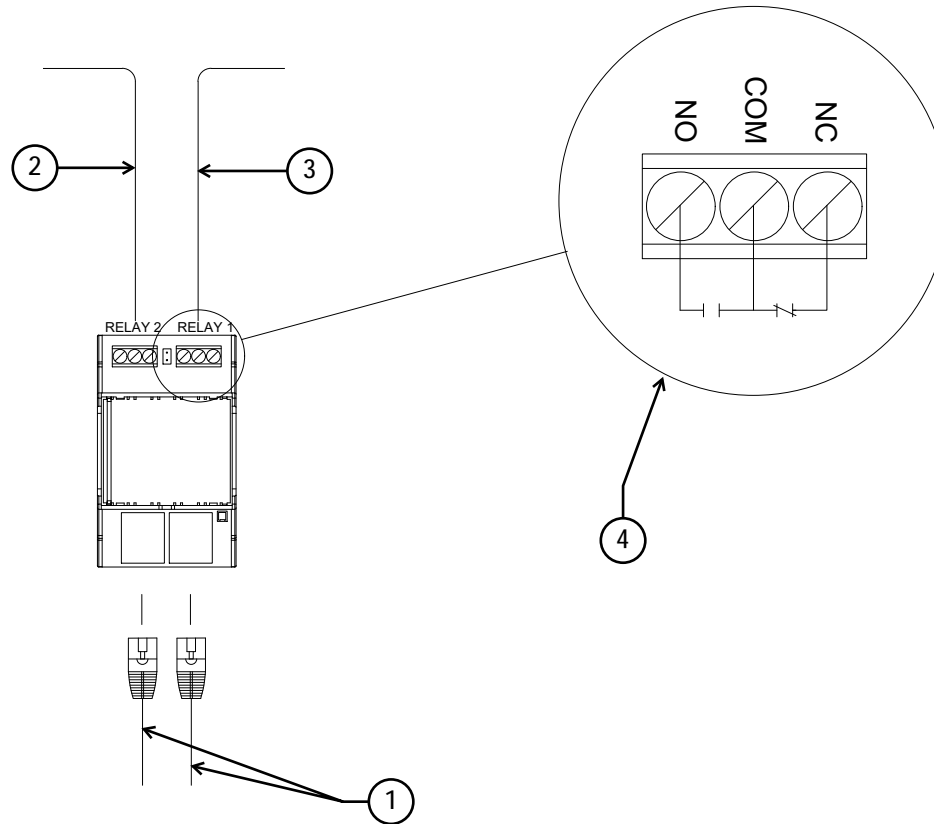

TIPS / NOTES

1. MINIMUM CAT 5 CABLE - SMART PORT OF LRM OR RM - DO NOT CONNECT TO BRANCH PORT
2. 18/2 CONDUCTOR TO CONTROL POINT 1
3. 18/2 CONDUCTOR TO CONTROL POINT 2
4. RELAY WILL CHANGE STATES BASED ON OCCUPANCY AND VACANCY STATE OF CONNECTED SENSOR(S)

CONNECTIVITY DIAGRAM

COMPONENT LIST

1. MSTR-DVOLT-2 (DOOR OPEN)
2. SBB1
3. LRM OR LIM
4. RD PANEL
5. SW-TS-M
6. SMOAS
7. TSUI
8. RM
9. WS-TS-C
10. SS-2B
11. SS-SF

CABLE LEGEND

- = éNET (CAT5)
- - - - - = BRANCH NETWORK (CAT 5)
- · - · - = SMART NETWORK (CAT 5)
- = 16/2 POWER CABLE

NOTE: ALL COMPONENTS MAY NOT BE PRESENT. DIAGRAM IS ONLY INTENDED TO SHOW CONNECTION POINTS BETWEEN COMPONENTS

